




DOOR CANOPIES FITTING INSTRUCTIONS BUXTON DECORATIVE

PRO-CAN

DOOR CANOPIES

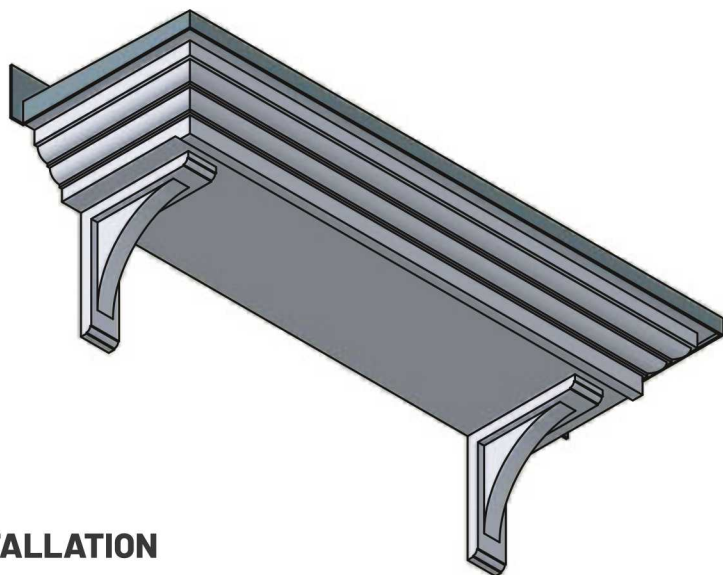


Your ProCan door canopy kit contains:

| ITEM | QTY |
|-----------------|-----|
| Canopy Unit | 1 |
| Bracket Covers | 2 |
| Bracket Inserts | 2 |
| Fixing Kit | 1 |

INSTALLATION

1. Mark positions for the two timber insert brackets equally either side of the door aperture. The brackets must be level with each other, vertical and set higher than the top of the door.
2. Drill the brackets to accept the screws (at least 2 per bracket – 10mm), then drill through the bracket holes straight into the wall using a 10mm masonry bit. Insert an 80mm wall plug sleeve into each hole. Fully screw the insert brackets to the wall while checking for horizontal and vertical alignment.
3. Centre the canopy on the brackets. Use a 10mm bit to drill through the GRP upstand into the wall at maximum of 450mm centres. Insert an 80mm wall plug into each hole and fully screw the upstand to the wall. The upstand must be over flashed in lead or sealed with mastic. Caps are provided to cover all fixings.
4. Screw the brackets upwards into the canopy soffit with screws supplied.
5. Position a bracket cover over each insert bracket and securely screw through the side of the cover into the brackets.

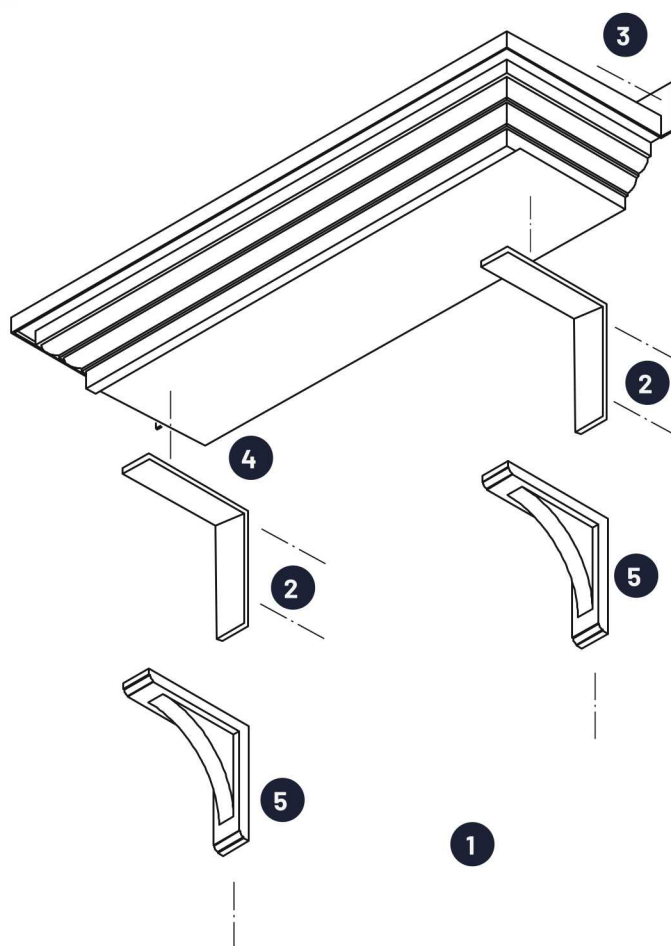

FLAT



ARCHED



MONO PITCH



APEX



DOOR CANOPIES FITTING INSTRUCTIONS BUXTON DECORATIVE

PRO•CAN

DOOR CANOPIES

Handling

Mouldings can usually be carried manually. If mechanical handling equipment is used, always use suitable battens or bearers to protect the product. Remove the protective packaging only when fixing is imminent. Care should be taken not to damage the surface of the GRP.

Storage

Always store the canopy on its back i.e. with the fixing flange face downwards, covered and dry. If stored externally, do not expose to direct sunlight whilst inside the packaging.

Maintenance

GRP is low maintenance and will not require regular painting or decorating. To maintain its finish we advise cleaning periodically using an ammonia free detergent solution. Abrasive cleaners, wire wool or scourers should not be used as they may scratch the finished surface.



FLAT



ARCHED



MONO PITCH



APEX